


Installation Instructions for RWS-S – Shrub Root Watering System

For new or relocated trees:

Installation Steps:


1. Install Shrub RWS units, per drawing. The number of RWS-S units will vary depending on the size, type and watering requirements of the shrub (1- 2 RWS-S units are recommended per shrub). For planting a row of shrubs, plant per drawing.
2. Place units vertically with top even with ground surface. The RWS-S requires a 10" (25.4 cm) hole depth.
3. For the basic RWS-S, add irrigation components as desired.
4. For models with the pre-installed hardware, connect the 1/2" barb fitting to the lateral line.
5. Fill area surrounding unit with soil.
6. Follow planting guidelines for specific shrub species, and for local conditions.

Single Shrub

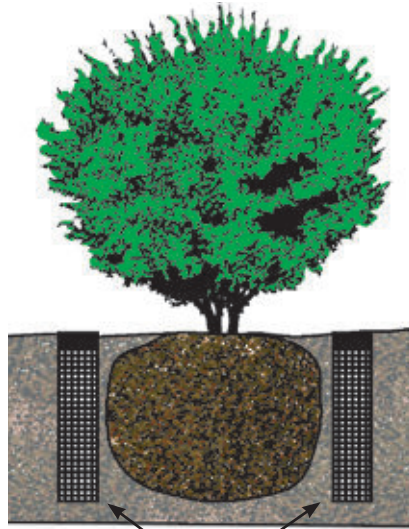

Space units evenly as shown.

Row of Shrubs

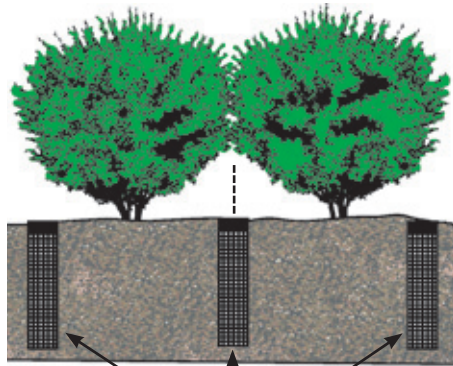

Position units evenly spaced as shown.

For existing shrubs:

Installation Steps:

1. Core out holes to 10" depth.
2. Position units evenly spaced, per drawing. The number of RWS-S units will vary depending on the size, type and watering requirements of the shrub (1- 2 RWS-S units are recommended per shrub). For planting a row of shrubs, plant per drawing.
3. Place units vertically with top even with ground surface. The RWS-S requires a 10" (25.4 cm) hole depth.
4. For the basic RWS-S, add irrigation components as desired.
5. For models with the pre-installed hardware, connect the 1/2" barb fitting to the lateral line.
6. Fill area surrounding unit with soil.
7. Follow planting guidelines for specific shrub species, and for local conditions.

Single Shrub



Install product with top even with ground surface